



First :

Connect monitor, mouse , network cable to encoder to c onfigure the encoder.

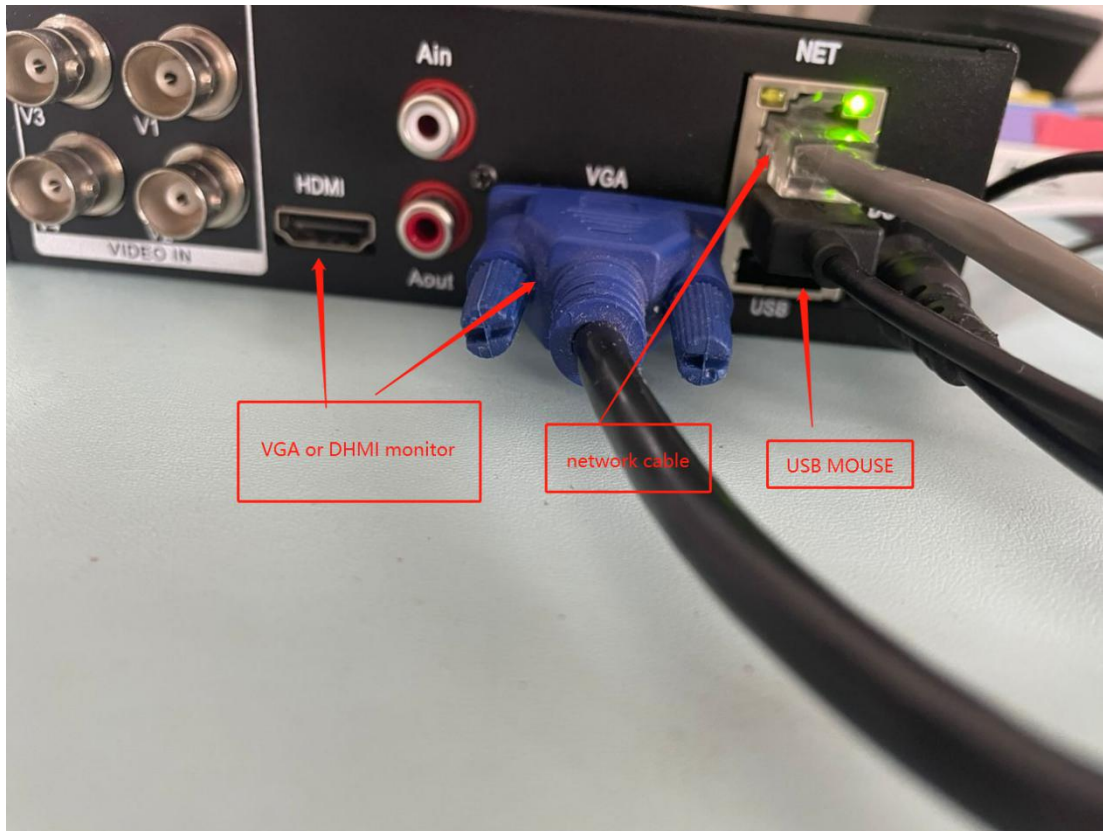


**Second:**

Click mouse right button select the “main menu”

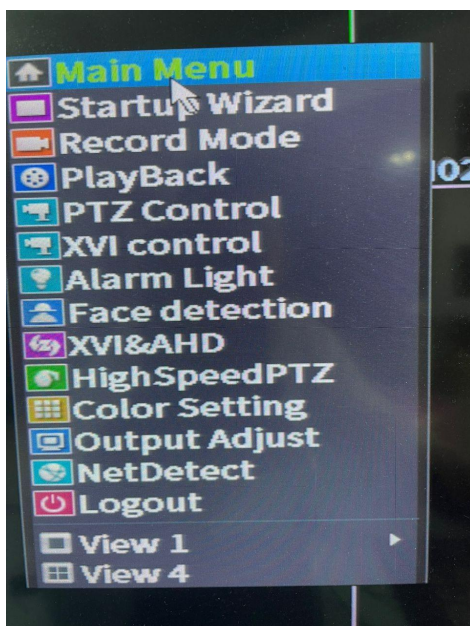


### THIRD:

Note down the login “username” and “password”

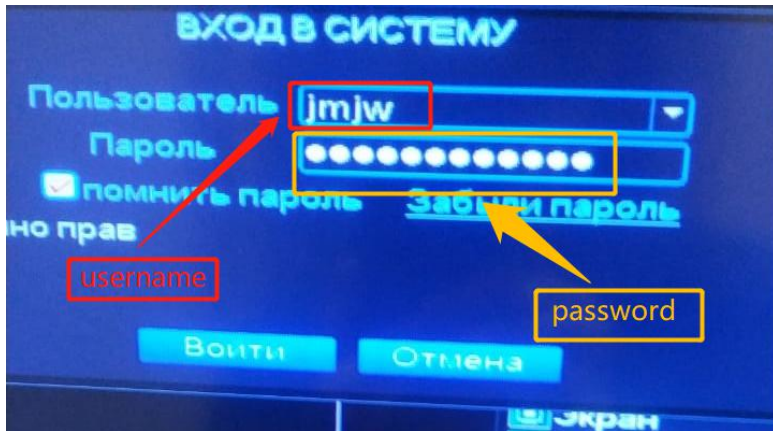

### FOURTH:

set your ip address:(default IP address is 192.168.1.10)

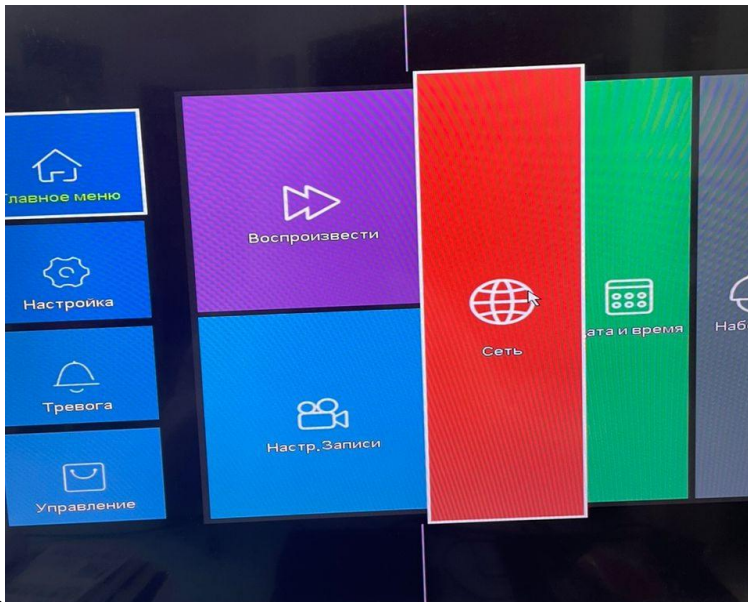

1.




2.

## FIFTH:

Install VLC player there on your computer to check if the RTSP address is working properly

<https://www.thewindowsclub.com/vlc-media-player-features-review-download>

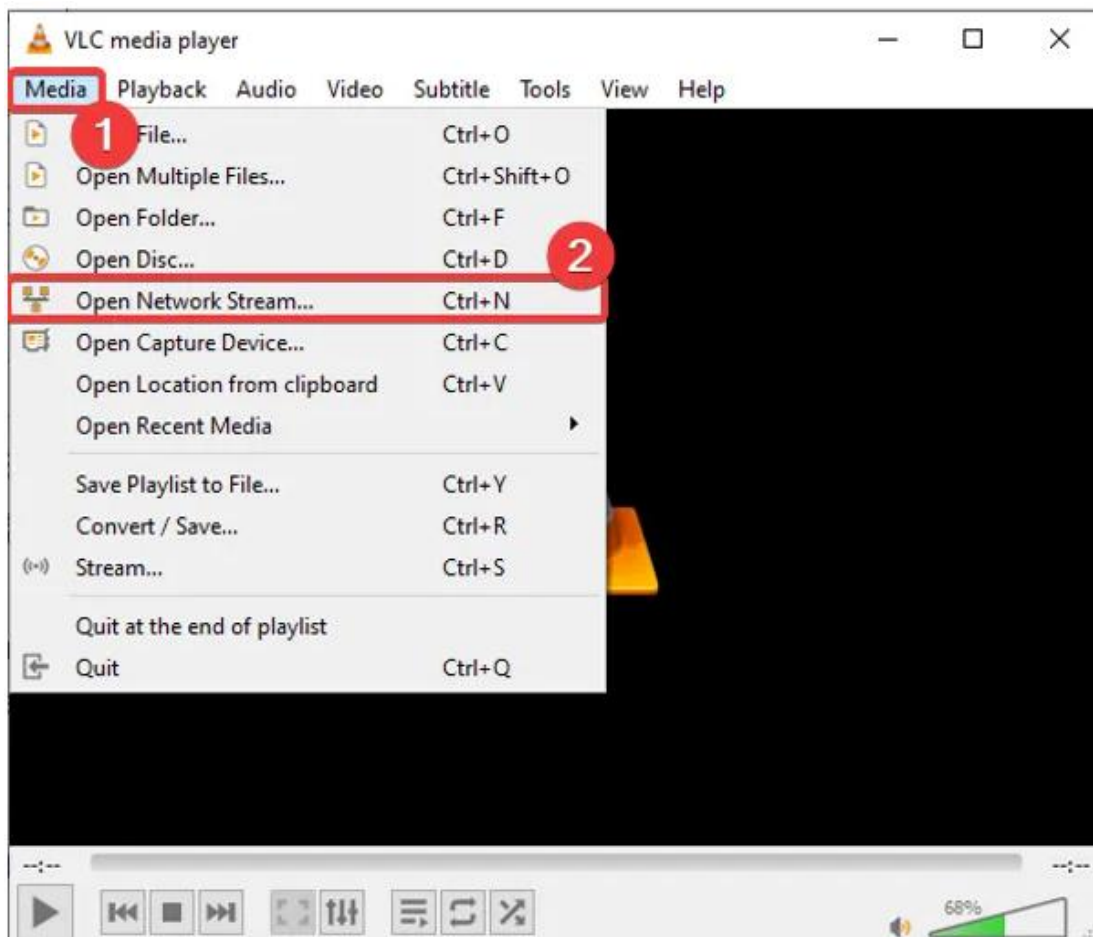

RTSP  
address:

## Appendix 3. Protocol description

Main Stream    rtsp://192.168.1.10:554/user=admin&password=&channel=1&stream=0.sdp?real\_stream  
Sub Stream    rtsp://192.168.1.10:554/user=admin&password=&channel=1&stream=1.sdp?real\_stream

rtsp://192.168.1.10:554/user=admin&password=&channel=1&stream=0.sdp?real\_stream

encoder  
IP address

username

password

channel  
1  
2  
3  
4

Stream  
0 Main stream  
1 Sub stream

Channel 1 **NOTE:**change **admin** to your username .**password** to your password (**THIRD:**)

```
rtsp://192.168.1.10:554/user=admin&password=password&channel=1&stream=0.sdp?real_stream
```

Channel 2

```
rtsp://192.168.1.10:554/user=admin&password=password&channel=2&stream=0.sdp?real_stream
```

Channel 3


```
rtsp://192.168.1.10:554/user=admin&password=password&channel=3&stream=0.sdp?real_stream
```

Channel 4

```
rtsp://192.168.1.10:554/user=admin&password=password&channel=4&stream=0.sdp?real_stream
```




**Note:**The video system of most countries uses PLA and NTSC. We will modify it to the video system of your country before delivery, Of course you can modify it here.

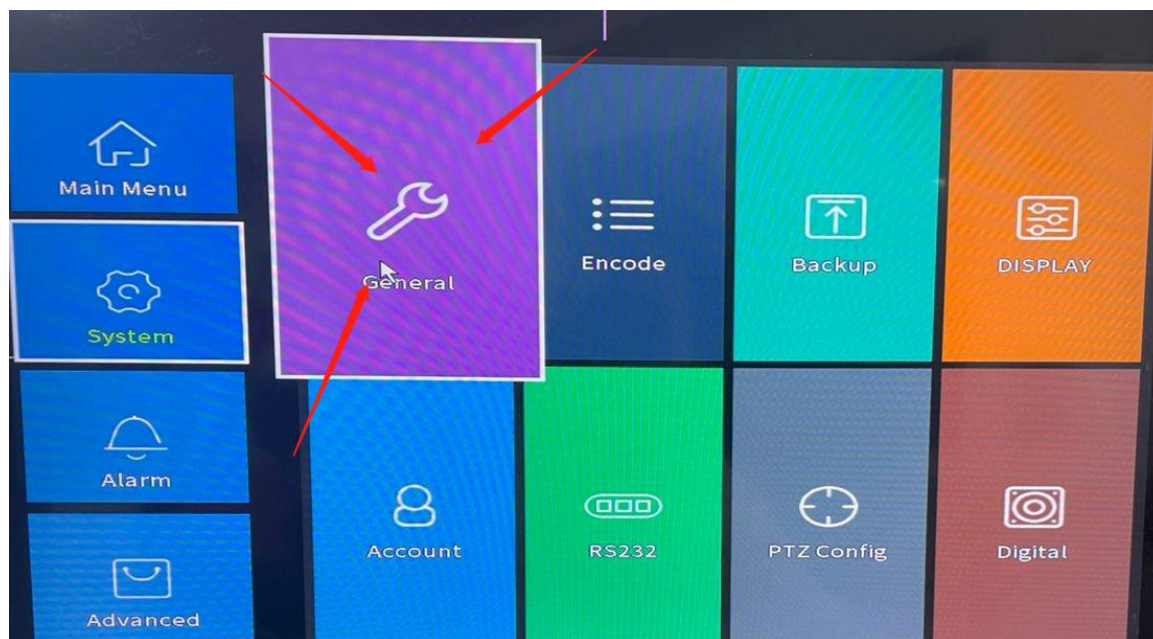


## Appendix 4. How to connect to Dahua NVR

USE Browser(IE chrome)

Login Dahua NVR,Click Settings-"Remote Device "

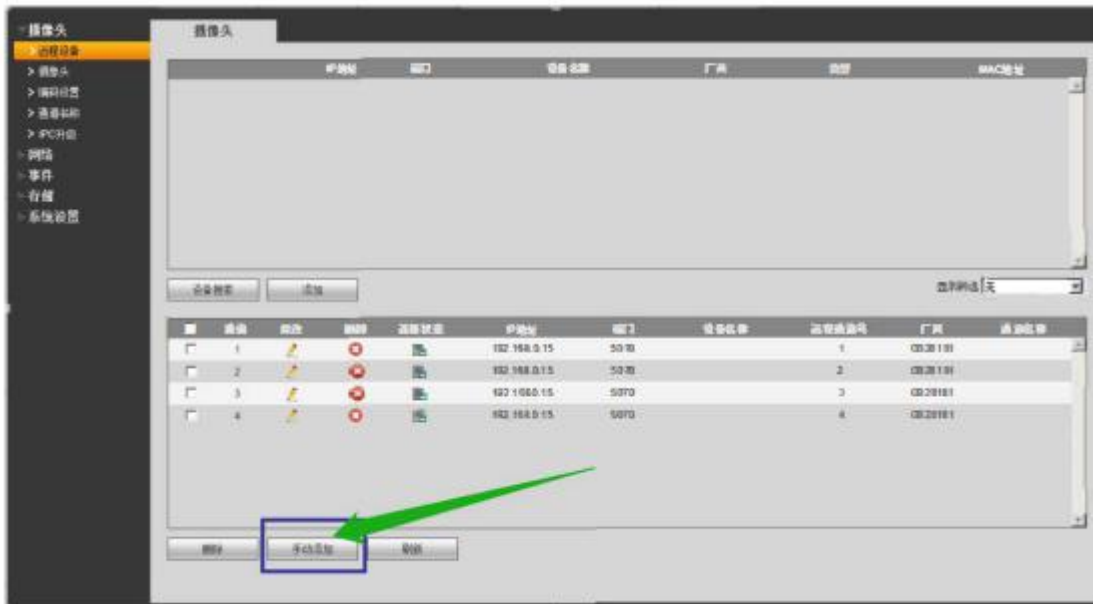

Click -> "Manully ADD"

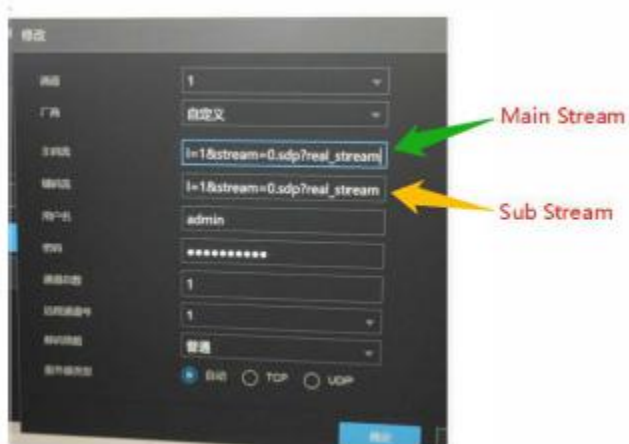

Main stream

```
rtsp://192.168.1.10:554/user=admin&password=password&channel=1&stream=0.sdp?real_stream
```

Sub stream


```
rtsp://192.168.1.10:554/user=admin&password=password&channel=1&stream=1.sdp?real_stream
```

## Appendix 5. How to connect to Hikvision NVR

USE Browser(IE chrome)

Login Hikvisio NVR,Click Settings

Click -"System" ->> " Camera Management" ->> "Custeam Protocol"

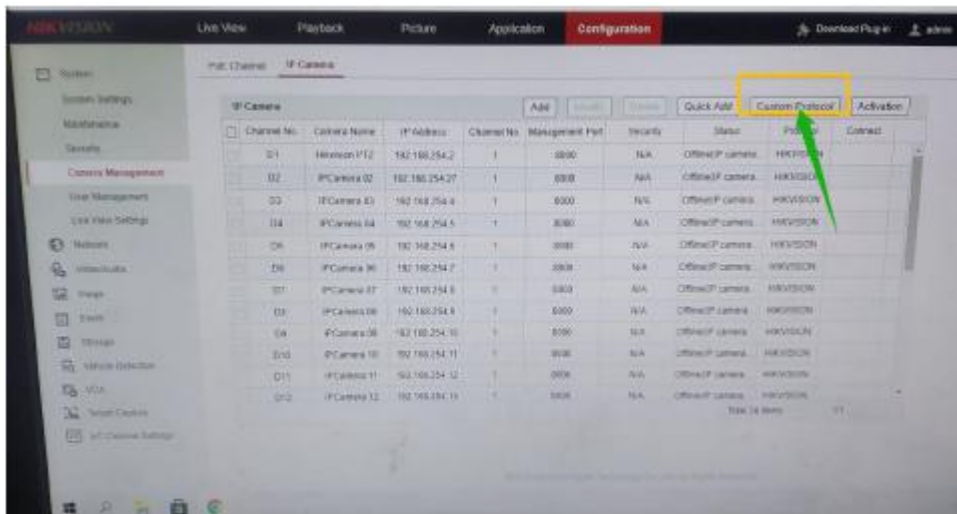

1:Custeam protocol

1,(Each channel needs to be added once)

2: Decoder CH 1

(or other name with your mind)

4: RTSP

5: Auto

```
user=admin&password=password&channel=1&stream=0.sdp?real_stream
```

```
user=admin&password=&channel=1&stream=0.sdp?real_stream
```

username

password

channel

Stream

0 Main stream

1 Sub stream



1

2

3

4

Click -"Add"

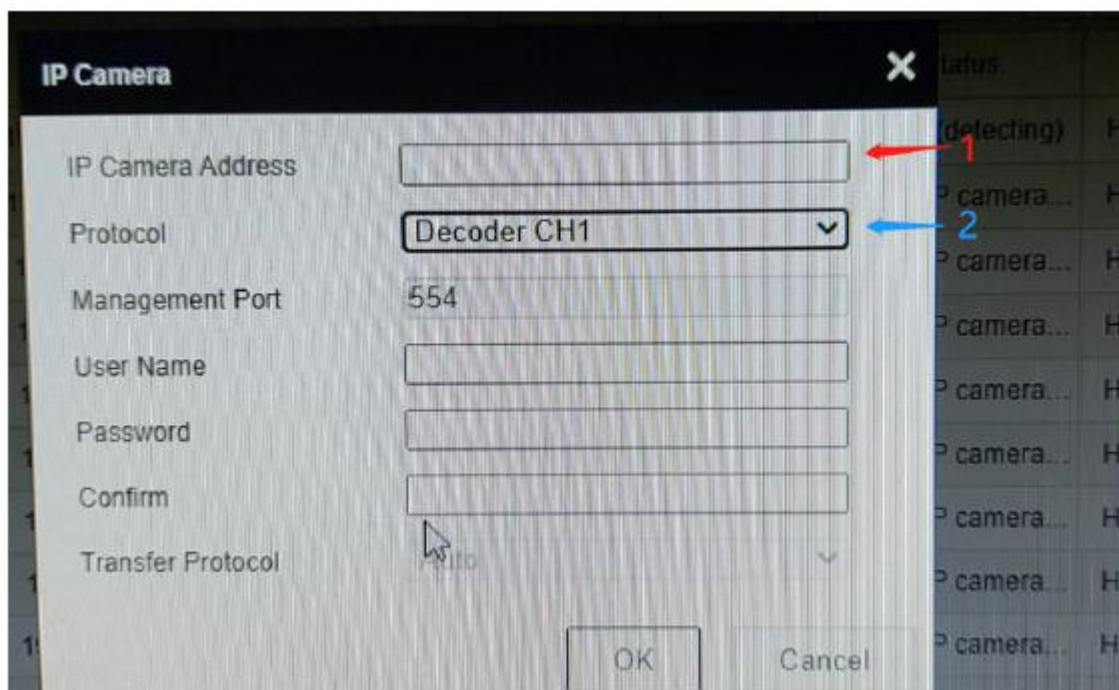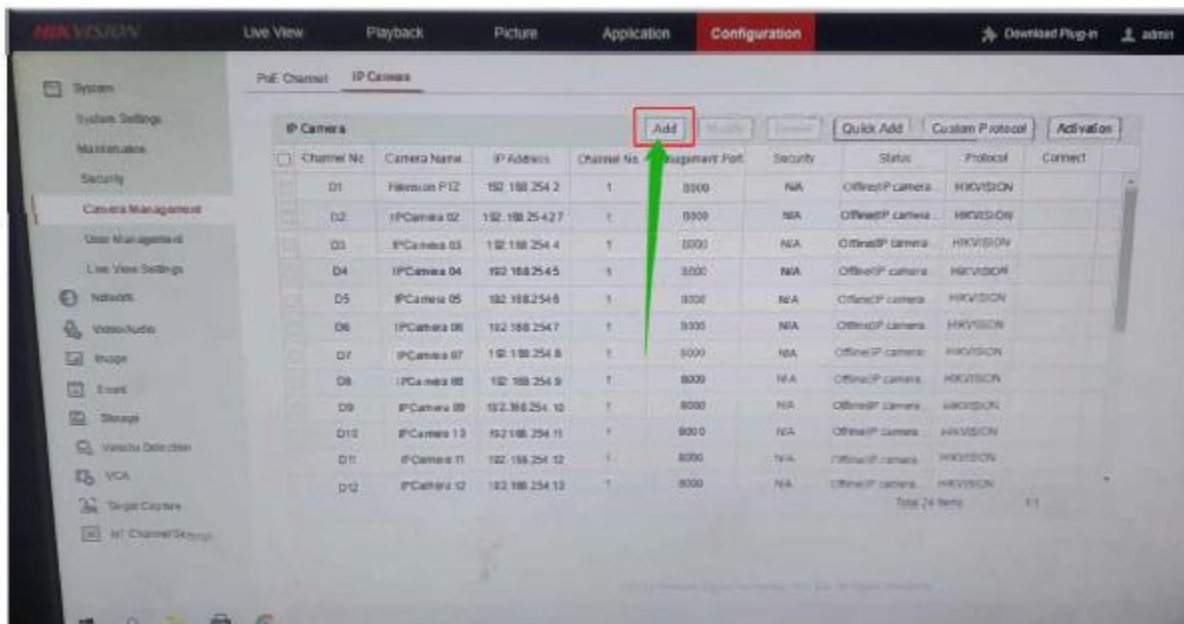

1: Encoder IP address (Default is :192.168.1.10)  
2: protocol Name Same as Previous step  
Decoder CH

Username, password, confirm 1 other name with your mind